 


Corvan® POWER SCRUB

P8/P8 Pro

Thank you for purchasing a Corvan product.

 
Please visit www.corvan.com.my/warranty or scan the QR code to register your product's warranty and www.corvan.com.my/support for video user guide and technical support.

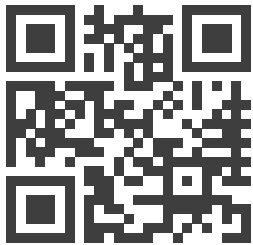

corvan.com.my/warranty



corvan.com.my/support

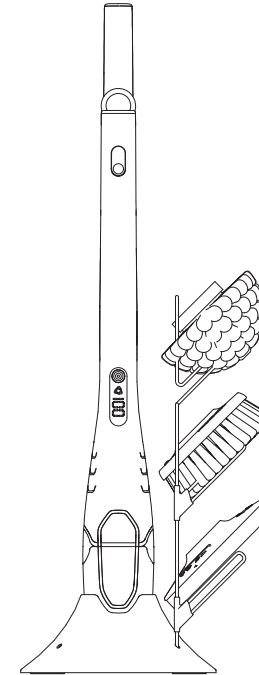

Corvan®

Service Centre
T01 & T02, 3rd Floor, Atria Shopping Gallery,
Jalan SS22/23, Damansara Jaya, 47400
Petaling Jaya, Selangor, Malaysia
Tel: 603-7728 8166
Email: crm@corvan.com.my
Website: www.corvan.com.my

Corvan is a registered trademark of Corvan Asia Sdn Bhd.
COPYRIGHT 2022 ALL RIGHTS RESERVED

USER MANUAL



Please read this manual carefully before using this product.
We hope you enjoy using this product as much as we enjoyed
developing it and using it daily.

www.corvan.com.my

TABLE OF CONTENTS	2
IMPORTANT SAFETY INSTRUCTIONS	3
PRODUCT PARTS	4
PREPARING TO USE	5-6
USING	7-8
CLEANING AND MAINTENANCE	9
STORAGE	10
TECHNICAL SPECIFICATIONS	11
TROUBLESHOOTING	12
WARRANTY POLICY	13-14


Before using the Corvan Power Scrub(appliance), please read this user manual carefully.

  1. Only use the appliance in a suitable environment.
2. This appliance is not designed for use by persons (including children) with reduced physical, sensory or mental capacities or lack of experience and knowledge, unless supervised by a person responsible for their safety.
3. If the appliance or power adaptor is damaged, please return it to the authorized service center for service or replacement to avoid personal injury.
4. Children below age 8 are not allowed to use this appliance.
5. Children of age 8 and above are only allowed to use this vacuum in the company of their custodian.
6. This appliance is NOT a toy. Please pay special attention when you are using it around a child, pet or plant.
7. To avoid injury or electric shock, please do not attempt to repair the appliance.
8. When charging the appliance, connect the power adaptor to the power socket first and then to the unit.
9. Keep hair, cloth and any part of your body away from the spinning head/brush.
10. Watch the steps when using the appliance on a higher level.
11. This appliance is designed for domestic use following this instruction manual.
12. Do not keep the appliance in charging status if you are planning to be away for a long time.
13. To avoid electric shock, do not dip any part of the appliance into liquid when it is connected to a power socket.
14. Use only genuine spare parts and accessories from Corvan.
15. Charge the battery of the appliance with correct voltage rating stated in the product specification.
16. Store the appliance in a cool and dry place.
17. Do not charge the battery or the appliance outside of the temperature range specified in the instructions. Charging with the wrong power adapter rating or at a temperature outside of the specified range may damage the battery and increase the risk of fire. To optimise the battery life : When not in use, keep the appliance at room temperature between 10°C to 40°C . The ambient temperature range for operation and charging should be between 10°C to 50°C.
18. Please return the faulty or malfunctioning vacuum to the authorized service center.

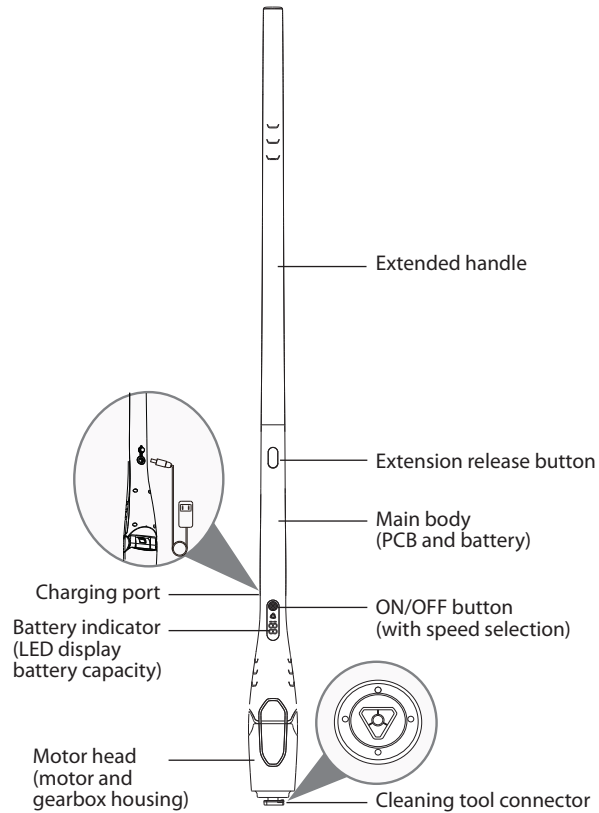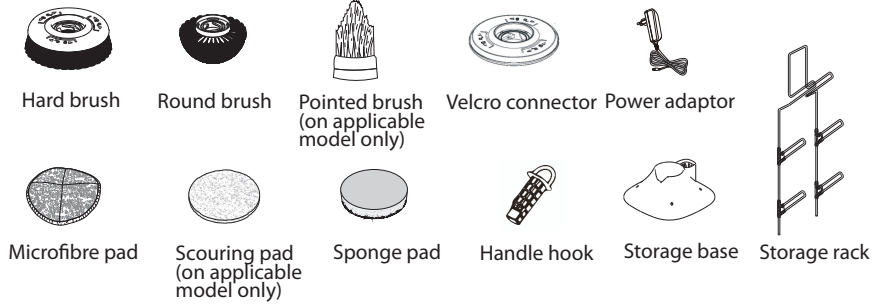


Charging

1. Find a cool and dry location.
Plug the power adaptor into a functioning wall socket.
Next, pull out the rubber charging port cover on the main body gently and plug in the DC output plug and switch on the power supply. Charging light on the mainbody will turn red to indicate charging is in progress. The digital battery indicator shows the percentage of battery capacity.

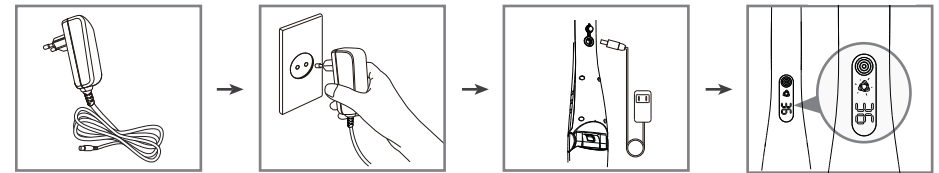


2. When the battery capacity display shows 100(100% charged), unplug the DC output plug and **PLACE BACK THE RUBBER CHARGING PORT COVER SECURELY** to prevent splashing water from damaging the appliance.

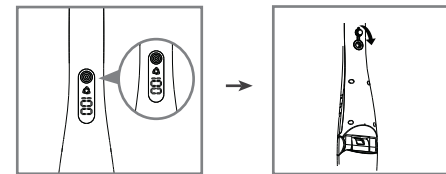

3. The appliance **DOES NOT** need to be fully charged to start using. However, it is recommended to be fully charged before switching off the power supply whenever possible.
4. If the appliance is not to be used for more than a month, fully charge, unplug and store it in a cool and dry place. This is to avoid damaging the rechargeable battery due to deep discharge.


Preparing the machine

1. This appliance can be used with the main body alone or with the extended handle.
2. Choose a cleaning tool, align it with the cleaning tool connector on the main body. Slot in and turn clockwise to lock the cleaning tool.

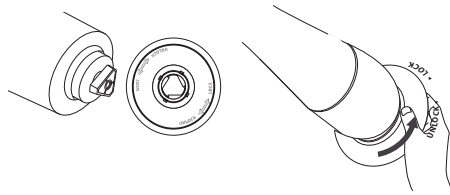


3. To install the extended handle, remove the handle hook and push in the extended handle to "click".

To remove the extended handle, press the extension release button and pull out the extended handle.

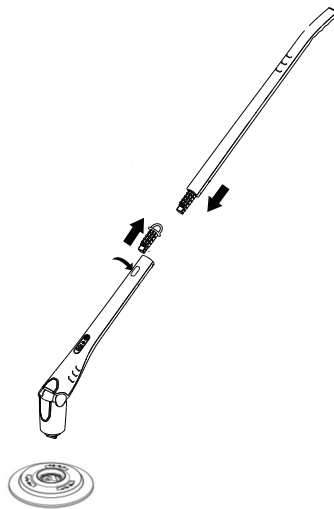


Using

1. After fitting your chosen cleaning tool onto the appliance, press the ON/OFF button to turn it on and operate at speed 1 (spinning at approximately 200 rpm unloaded). Press again to switch to speed 2 (spinning at about 290 rpm unloaded). Press the 3rd time to switch off the appliance.
2. Always hold the power scrub with 2 hands. One holding the head and the other holding the handle as illustrated below. The hand holding the head can move to clean, or press to add pressure to clean stubborn stains, whenever necessary.
3. Auto gearbox - In Speed 1, the power scrub will automatically switch to Speed 2 when it senses a significant reduction in speed due to resistance and requires higher torque to continue cleaning. It will switch back to Speed 1 when the resistance is reduced.

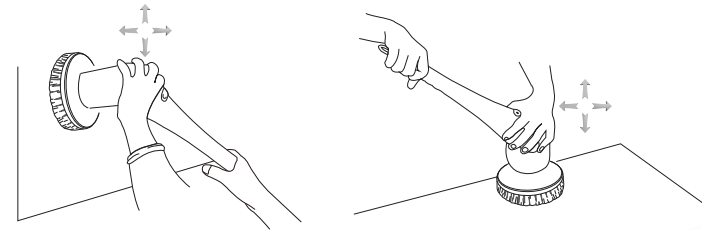

WARNING!! BEWARE of the strong torque (rotating force). Handle with care to avoid injury.

4. Whenever necessary, for example, to clean the floor or ceiling, use the extension rod to extend the reach.
5. For tough or stubborn stain/dirt, apply dirt dissolving agent (detergent, enzyme, vinegar etc) and let it sit for about 5-10 minutes or the amount of time recommended by the manufacturer before using the appliance. Then rinse thoroughly after cleaning is completed.

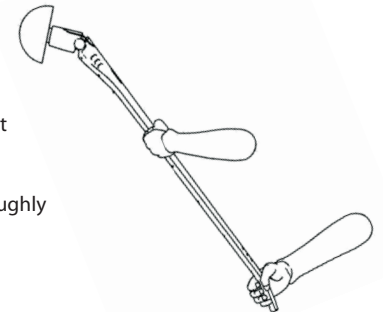

NOTE:

1. This appliance is designed to assist with your manual scrubbing, brushing and buffing to help reduce muscle fatigue when used correctly.
2. Use your usual cleaning agents with the right tools. You may need to try out various tools to determine the most appropriate tool for any specific cleaning task.
3. In most cases, clean with flowing water with your usual cleaning agents will yield better cleaning results.

Water Resistance

1. This appliance is designed to work in dry and wet environment for domestic use.

However, please take special note that only the motor head can be submerged in water(waterproof IPx7) while the the main body(above the marking in Fig. 1) is splashproof(IPx4) but NOT SUBMERSIBLE.

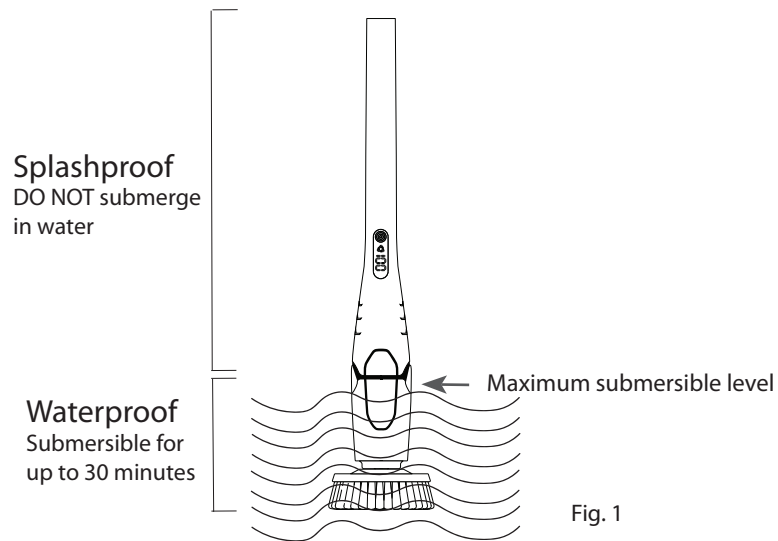


Fig. 1

NOTE:


1. IPx7(motor head) : can be submerged in water for up to 30 minutes.
2. IPx4(main body) : DO NOT submerged in any liquid. Nevertheless, it can withstand water splashing.

Upkeep

1. Rinse the cleaning tool thoroughly, especially after using with any cleaning agent. DO NOT dry under direct sunlight.




2. Rinse and wipe dry the main body with a piece of clean and dry cloth, before putting it back to the storage base and storage rack.

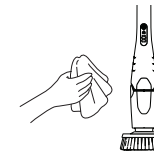

3. Recharge the battery till full, and switch off the power supply..



1. Push the 2 ends of the storage rack (Fig. 1) into the respective holes on the storage base (Fig.2) to secure the storage rack. You can choose to install the rack on the left or right side of the storage base.

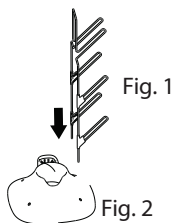

2. For storage and/or charging the battery, place the extension rod, main body and cleaning tools onto the storage unit (Fig.3). If you have more than 3 tools (on selected models), you may place the brushes by hanging them onto the arms of the storage rack while resting the pads onto the remaining racks.



3. When the appliance is not in use, store it in a cool and dry place (10 to 40 degree Celcius).

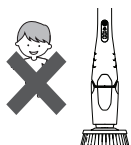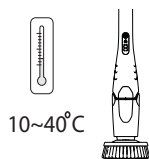

WARNING!

Keep this appliance away from children and pets while operating or storing.

Model	:	P8
Power adaptor input	:	220 - 240VAC 50-60Hz
Power rating	:	84W
Charging time	:	2.5-3.5 hours
Operating time	:	60-100min
Water resistance rating	:	IPx4 (main body), IPx7 (motor head)
Rotating speed	:	180-220rpm (speed 1), 280-300rpm (speed 2)
Operating temperature	:	10-50 degree C
Product dimension	:	75(W) x 75(D) x 600(L)mm(1,280mm with extension handle)
Net Weight	:	800gm (main body) 1100gm (main body with extension rod) 18-130gm(cleaning tools)

Model	:	P8 Pro
Power adaptor input	:	220 - 240VAC 50-60Hz
Power rating	:	84W
Charging time	:	2.5-3.5 hours
Operating time	:	60-100min
Water resistance rating	:	IPx4 (main body), IPx7 (motor head)
Rotating speed	:	180-220rpm (speed 1), 280-300rpm (speed 2)
Operating temperature	:	10-50 degree C
Product dimension	:	75(W) x 75(D) x 600(L)mm(1,280mm with extension handle)
Net Weight	:	800gm (main body) 1100gm (main body with extension rod) 18-130gm(cleaning tools)

Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CORVAN SHALL NOT BE LIABLE FOR LOSS, WHETHER DIRECT OR INDIRECT, OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS OR OTHER FINANCIAL LOSS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CORVAN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CORVAN'S ENTIRE LIABILITY SHALL BE LIMITED, AT CORVAN'S OPTION, TO REPLACEMENT OR REPAIR OF THE PRODUCT OR REFUND OF THE PURCHASE PRICE PAID.

THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND IS NONTRANSFERABLE.

No Other Warranties

No Corvan dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Governing Law

This Limited Warranty shall be governed by the laws of Malaysia.

January 01, 2025

Corvan®

Service Centre

T01 & T02, 3rd Floor, Atria Shopping Gallery,

Jalan SS22/23, Damansara Jaya, 47400

Petaling Jaya, Selangor, Malaysia

Tel: 603-7728 8166

Email: crm@corvan.com.my

Website: www.corvan.com.my

Problems	Solution
The appliance does not work	<ul style="list-style-type: none"> • Charge the appliance. • Confirm that there is no debris between the rotating parts and the rotating head. • Make sure the power is switched on.
The product has insufficient rotational force	<ul style="list-style-type: none"> • Confirm that there is no debris in the rotating parts. • Charge the appliance if it is low in power.
Unable to charge	<ul style="list-style-type: none"> • Check that the power adapter is securely connected to a wall socket. • Check that the DC output plug is plugged into the charging port firmly. • Make sure the correct power adaptor is used • Using other appliance to verify that the wall socket is working.
After fully charged, the run time is significantly shorter than usual	<ul style="list-style-type: none"> • The appliance will consume more energy when more pressure is applied during cleaning, thereby reducing its run time. • If the appliance has been used for a period of time, the battery may be due for a replacement.
Some bristle of the brush is frayed(bent)	<ul style="list-style-type: none"> • This is normal when excessive pressure is applied when using or certain part of the brush is compressed. Pour or dip in warm/hot water to soften the bristle. Use your fingers to reshape the bristles and make them straight again.

NOTE:

1. If symptom persists, please contact service our centre at 603-77288166 or email crm@corvan.com.my for further assistance.
2. For product servicing, repair, warranty claim, DO NOT return the appliance to the retailer as they do not provide after sales service.

Corvan Asia Sdn Bhd (Corvan) warrants to the original purchaser (“you” or “your”) that your Corvan Power Scrub (“Product”) shall be free from defects in material and workmanship for 1 year from the date of original purchase.

Remedies

To the maximum extent permitted by applicable law, Corvan’s entire liability and your exclusive remedy for any breach of warranty during the applicable warranty period shall be, at Corvan’s option, to repair or replace the Product, provided that the Product is returned to Corvan’s service center or such other place as Corvan may direct with a copy of the sales receipt or dated itemized receipt. Shipping, handling charges and bank credit card commission may apply. Corvan may, at its option, use new or refurbished or used parts in good working condition to repair or replace any Products. Any replacement Product will be warranted for the remainder of the original warranty period.

How to Obtain Warranty Support

Before submitting a warranty claim, we recommend you to contact Corvan’s technical support at 603-77288166 or email crm@corvan.com.my for technical assistance.

Exclusions

This warranty does not cover the power adaptor and consumables including cleaning tool and brushes. Problems or damages resulting from (1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly of the Product; (2) improper operation or maintenance, usage not in accordance with Products instructions or connection to improper voltage supply; (3) negligent use or care, neglect or careless operation of the Product; (4) use of consumables, parts and accessories other than those produced or recommended by Corvan are not covered under this warranty. In addition, to the maximum extent permitted by applicable law, this warranty does not cover Product (1) used and claimed outside the country of purchase; (2) not purchased from an authorized dealer (online or offline) of Corvan; (3) repaired or altered by parties other than Corvan, or its authorized agents; (4) whose serial numbers have been altered or removed; or (5) damaged from external sources such as transit, weather, electrical outages or POWER SURGE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE WARRANTIES SET OUT ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR TERMS AND CONDITIONS, AND WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OR TERMS AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT ARE EXPRESSLY DISCLAIMED BY CORVAN AND ITS SUPPLIERS. NO OTHER WARRANTIES OR GUARANTEES, WHETHER EXPRESS OR IMPLIED, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON CORVAN.