


Corvan[®]

CORDLESS WET AND DRY VACUUM

W6 PRO

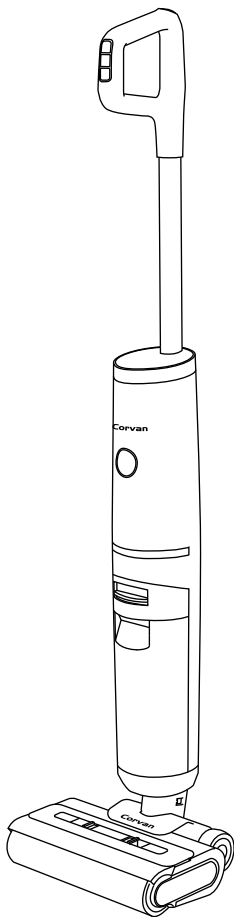


USER MANUAL

Please read this manual carefully before using this product.
We hope you enjoy using this product as much as we enjoyed
developing it and using it daily.

Thank you for purchasing a Corvan product.

Please visit www.corvan.com.my/warranty or scan the QR code to register your product's warranty and www.corvan.com.my/support for video user guide and technical support.

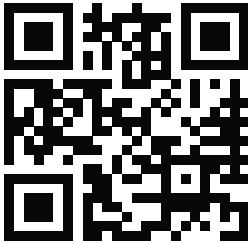

corvan.com.my/warranty



corvan.com.my/support

Corvan[®]

Service Centre

T01 & T02, 3rd Floor, Atria Shopping Gallery,

Jalan SS22/23, Damansara Jaya, 47400

Petaling Jaya, Selangor, Malaysia

Tel: 603-7728 8166

Email: crm@corvan.com.my

Website: www.corvan.com.my

Corvan is a registered trademark of Corvan Asia Sdn Bhd.

COPYRIGHT 2025 ALL RIGHTS RESERVED

Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CORVAN SHALL NOT BE LIABLE FOR LOSS, WHETHER DIRECT OR INDIRECT, OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS OR OTHER FINANCIAL LOSS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CORVAN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CORVAN'S ENTIRE LIABILITY SHALL BE LIMITED, AT CORVAN'S OPTION, TO REPLACEMENT OR REPAIR OF THE PRODUCT OR REFUND OF THE PURCHASE PRICE PAID.

THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND IS NONTRANSFERABLE.

No Other Warranties

No Corvan dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Governing Law

This Limited Warranty shall be governed by the laws of Malaysia.

May 28, 2025.

TABLE OF CONTENTS

TABLE OF CONTENTS	2
IMPORTANT SAFETY INSTRUCTIONS	2
PRODUCT PARTS	3
PREPARING TO USE	3-4
USING	4-6
CLEANING AND MAINTENANCE	6
TECHNICAL SPECIFICATIONS	6
TROUBLESHOOTING	7
WARRANTY POLICY	7

Corvan Asia Sdn Bhd (Corvan) warrants to the original purchaser ("you" or "your") that your Corvan Cordless Wet and Dry Vacuum Cleaner product hardware and the brushless(digital) motor of the vacuuming turbine (jointly named "Product") shall be free from defects in material and workmanship for 1 year and 5 years respectively from the date of original purchase

Remedies

To the maximum extent permitted by applicable law, Corvan's entire liability and your exclusive remedy for any breach of warranty during the applicable warranty period shall be, at Corvan's option, to repair or replace the Product, provided that the Product is returned to the point of purchase or such other place as Corvan may direct with a copy of the sales receipt or dated itemized receipt. Shipping, handling charges and bank credit card commission may apply. Corvan may, at its option, use new or refurbished or used parts in good working condition to repair or replace any Products. Any replacement Product will be warranted for the remainder of the original warranty period.

How to Obtain Warranty Support

Before submitting a warranty claim, we recommend you to contact Corvan's technical support at 603-77288166 or email crm@corvan.com.my for technical assistance.

Exclusions

This warranty does not cover consumables including HEPA filters, roller brush, and cleaning solution. Problems or damages resulting from:(1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly of the Product;(2) improper operation or maintenance, usage not in accordance with Product instructions or connection to improper voltage supply;(3) negligent use or care, neglect or careless operation of the Product;(4) use of consumables, parts and accessories including batteries other than those produced or recommended by Corvan are not covered under this warranty. In addition, to the maximum extent permitted by applicable law, this warranty does not cover Product:(1) used and claimed outside the country of purchase;(2) not purchased from an authorized dealer of Corvan;(3) repaired or altered by parties other than Corvan, or its authorized agents;(4) whose serial numbers have been altered or removed; or(5) damaged from external sources such as transit, weather, electrical outages or power surge.

Disclaimer

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE WARRANTIES SET OUT ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR TERMS AND CONDITIONS, AND WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OR TERMS AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT ARE EXPRESSLY DISCLAIMED BY CORVAN AND ITS SUPPLIERS. NO OTHER WARRANTIES OR GUARANTEES, WHETHER EXPRESS OR IMPLIED, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON CORVAN.

IMPORTANT SAFETY INSTRUCTIONS

Before using the Corvan Wet and Dry Vacuum, please read this user manual


1. Read all instructions before using the Wet and Dry Vacuum.
2. For indoor, domestic use only.
3. This appliance is not for individuals with limited physical, sensory, or mental abilities unless supervised.
4. If the Wet and Dry Vacuum, power plug, or charging station is damaged or faulty, return it to an authorized service centre to avoid injury.
5. Children under 8 years old should not use this product.
6. Children 8 years and older should use it only under supervision.
7. The Wet and Dry Vacuum is not a toy. Use with care around children and pets.
8. Do not attempt to disassemble or repair the appliance yourself.
9. Only use the charger provided and ensure the appliance is securely on the charging station.
10. Keep hands, hair, and loose clothing away from the Roller Brush and openings.
11. Do not use to clean flammable substances or hot liquids.
12. Be cautious when operating around wet or slippery surfaces to avoid falls.
13. Ensure all parts are assembled correctly before use.
14. Do not leave the appliance on the charging station unattended for long periods.
15. Do not immerse the appliance or any part in water or other liquids.
16. Use only genuine Corvan parts and accessories for best results and safety.
17. Charge using the supplied adapter only.
18. Empty and rinse the Waste Water Tank after each use to avoid odour and blockages.
19. Only operate the product within the recommended ambient temperature range (10°C to 35°C).
20. Avoid blocking vents or the brush area during use.
21. Store in a cool, dry place (18°C to 28°C) when not in use.

	Symptoms	Possible Causes	Suggested Solutions
1	Cannot Turn On	• The machine has no power or the battery is low. • Tangled hair or fur	• Connect with the charging station until fully charged • Clean the roller brush
2	Low Suction Power	• The drain hole or pipe is blocked • Waste Water Tank filled with dirt • Waste Water Tank is not installed in the correct position • The HEPA filter is too dirty	• Connect with the charging station until fully charged • Clean the roller brush
3	Machine Automatically Shuts Down	• Waste Water Tank is full	• Remove the Waste Water Tank and clean it
4	Roller Brush Does Not Rotate	• Tangled hair or fur	• Clean the roller brush
5	Machine Does Not Spray Water	• Clean water is not enough • Clean Water Tank installed incorrectly	• Fill the Clean Water Tank with water • Remove and reinstall the Clean Water Tank
6	Charging Station Cannot Charge	• Not plugged in • The machine is not properly placed on the charging station • The charging station is not properly connected to the plug	• Check that the power supply if it is connected to the charging station • Place the machine on the charging station again correctly • Reconnect the power supply
7	Clean Water Tank Empty Indicator Flashing	• Clean Water Tank is empty	• Remove the Clean Water Tank and fill it with water
8	Waste Water Tank Full Indicator Flashing	• Waste Water Tank is full	• Remove the waste water Tank and clean
9	Roller brush is not dry	• Power supply not working • Charging station not working • Heating element faulty	• Connect with another socket • Replace the charging station • Contact customer service for further assistance.

NOTE:

1. Do not return the vacuum to the retailer as they do not provide after sales service.
2. If symptom persists, please contact service centre at 603-77288166 or email crm@corvan.com.my for further assistance.


Attachment and Accessories

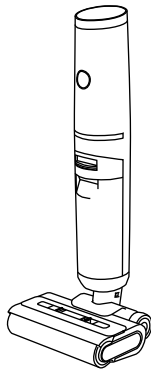


Main Body



Handle

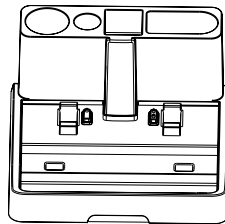

Self-cleaning station

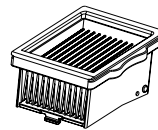

HEPA Filter



Detergent



Cleaning Brush




User Manual

What's in the package


Main body	x 1	HEPA Filter	x 2
Handle	x 1	Cleaning Solution	x 1
Self-cleaning station	x 1	Cleaning brush	x 1
Roller brush	x 1	User manual	x 1


NOTE:
Attachments and accessories contained in the package may vary due to continuous improvement or according to different model number.

Main Body

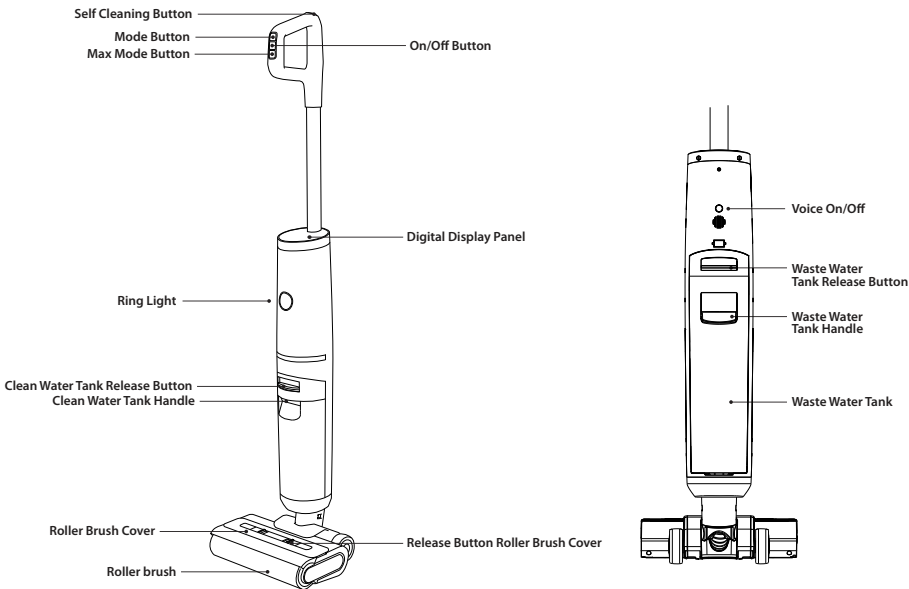

Digital Display Panel

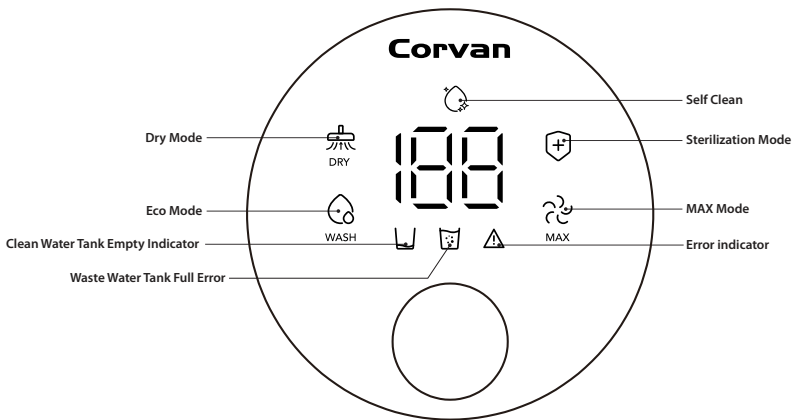

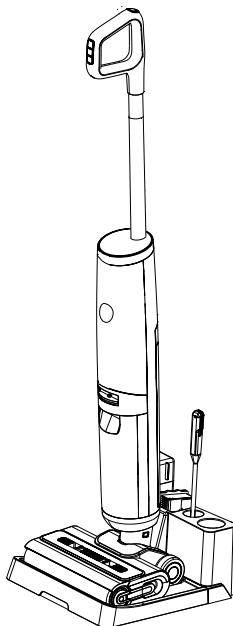

Wet and Dry Vacuum

Power Input	:	26.5VDC
Rated Power	:	220W
Battery	:	Li-ion 21.6V 4000mAh
Charging Time	:	3-4 Hours
Run Time	:	40min (Eco), 25min (Turbo)
Clean Water Capacity	:	550ml
Waste Water Capacity	:	580ml
Product Dimensions	:	745mm x 310mm x 335mm
Net Weight	:	3.9kg

Self cleaning station

Power Input	:	220-240V 50Hz
Power output	:	26.5V, 1A
Rated Power	:	150W
Product Dimensions	:	327mm x 310mm x 140mm
Net Weight	:	1.6kg

CLEANING & MAINTENANCE

Cleaning Main Body Wet and Dry Vacuum And Air Duct

1. Wipe the surface using a slightly damp cloth and mild detergent. Ensure no liquid enters the openings or internal parts of the machine (Fig 21).
2. Open the Waste Water Tank and use the provided cleaning brush or a damp cloth to clean inside the air duct. Regular cleaning helps maintain proper airflow and prevents suction loss (Fig 22).

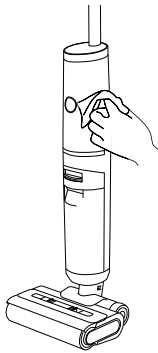


Fig 21


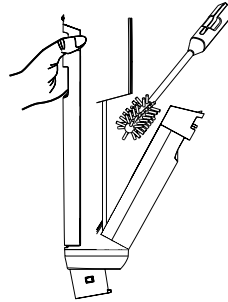


Fig 22


Cleaning The Station Base

1. Lift the removable plate from the self-cleaning station and clean it under running water or with a damp cloth.
2. Dry it thoroughly, then place it back into position before use.


1

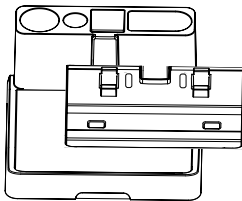

2

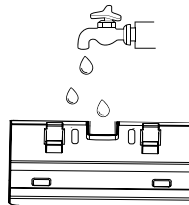

3

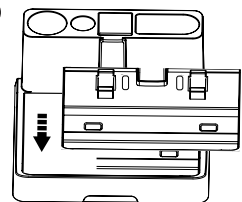

Installation & Removing the Mop Handle

- 1.To install: Firmly push the handle into the handle slot until you hear a 'click' sound (Fig 1).
- 2.To remove: Insert a long object into the release hole at the back of the unit. Press the internal latch while pulling the handle upward at the same time (Fig 2).

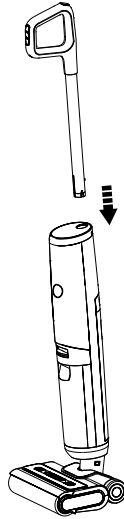


Fig 1

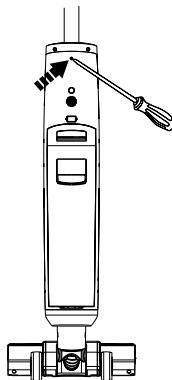


Fig 2

Charging The Battery

1. Insert the power cord into the self-cleaning station and plug it into a power outlet. Then, place the Wet and Dry Vacuum onto the self-cleaning station until it docks securely (Fig 3).
2. The battery indicator will light up steadily and the percentage will gradually increase until it reaches 100%. Once fully charged, the device will automatically stop charging and the indicator light will turn off. Charging typically takes about 3 to 4 hours, depending on environmental conditions.

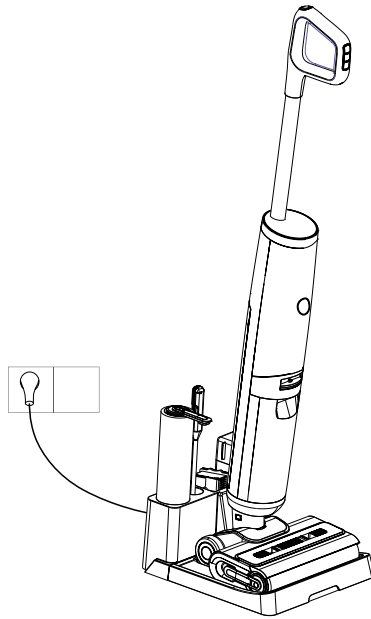



Fig 3

CLEANING & MAINTENANCE


Cleaning The Wet and Dry Vacuum Head and Roller Brush

1. Press the release button to unlock, then lift the cover upward to open.
2. Clean the cover under running water or wipe it with a damp cloth.
3. Pull the Roller Brush clip outward to remove the roller.
4. Remove the Roller Brush and use the cleaning tool to clear hair, fur, or debris.
5. If necessary, rinse the roller under running water. Take care to avoid the bearing area to prevent damage.
6. Reinstall the cover securely after cleaning.


1

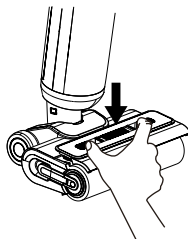


2

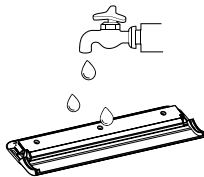


3

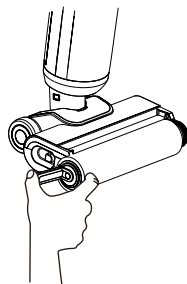


4

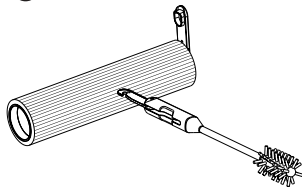

5

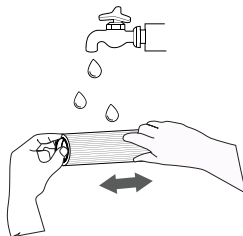

6

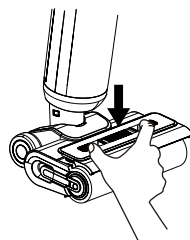

NOTE:


This maintenance is occasional only, as the self-cleaning station effectively cleans the Roller Brush after each use. Perform manual cleaning only when there is visible build up of hair, fur, or debris that cannot be removed automatically.

CLEANING & MAINTENANCE

1. For optimal performance, it is recommended to empty the waste water tank and rinse the filter after every use. Always keep the filters clean and dry before reassembling.
2. Replace the HEPA filter once a year or if water suction becomes weak even after proper cleaning and drying.

Cleaning The Waste Water Tank

1. The waste water tank full indicator will trigger an alert and automatically stop the machine when the tank is full.
2. Remove the waste water tank (Fig 16) and carry it to a sink, toilet, or designated disposal area.
3. Hold the latch and lift to remove the lid from the tank (Fig 17).
4. Pour out the Waste Water in the sink (Fig. 18) and rinse the tank thoroughly to remove any debris or buildup on the inner walls.
5. Always clean the top cover and HEPA filter if needed. Remove any solid waste from the partition and dispose of it into a dustbin do not rinse directly in the sink to avoid clogging. Rinse the HEPA filter under running water and ensure all parts are completely dry before (Fig 19).
6. Reattach the lid securely and place the waste water tank back into the Wet and Dry Vacuum (Fig 20).

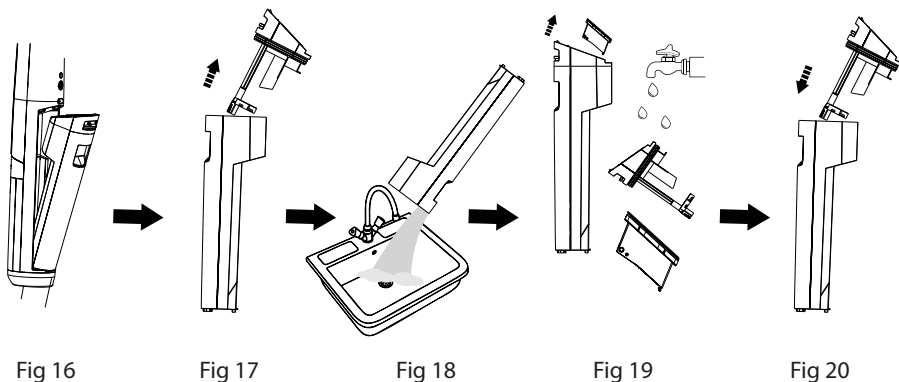

IMPORTANT:

1. For hygiene reasons, empty the Waste Water Tank after each use.

Removing & Installation the Clean/Waste Water Tank

1. To remove: Press the release button to unlock the latch. Then, hold the main unit steady with one hand and pull the tank handle upward with the other hand until it releases (Fig 4).
2. To install: Align the bottom of the water tank with the tank slot at the back of the machine. Push it inward gently until it clicks into place (Fig 5).

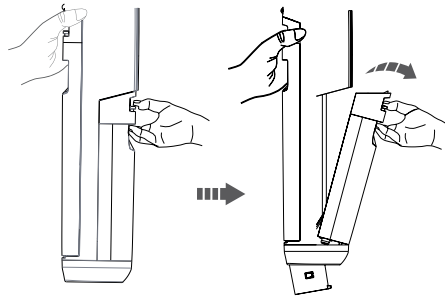


Fig 4

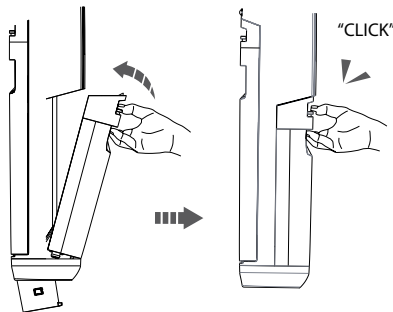


Fig 5

Filling The Clean Water Tank

1. Open the top lid of the clean water tank and add clean water (under 60°C) until it reaches the MAX clean water line (Fig 6). For deeper cleaning, add a small amount of Corvan floor cleaning solution using a standard cap (refer to the label for dosage instructions).
2. Close the lid tightly to ensure there is no leakage.
3. Align the bottom of the clean water tank with the unit and gently push it in until you hear a "CLICK" sound (Fig 7).

WARNING! Use only Corvan detergent. Other detergents may cause residue buildup, clog the system, and damage the machine.

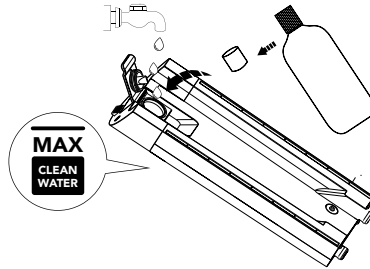


Fig 6

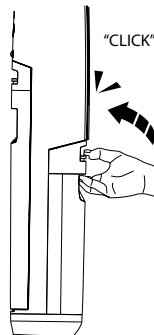


Fig 7

USING

IMPORTANT TIPS:

1. Stand upright, keeping your arm naturally bent and your shoulders relaxed.
2. Use a pendulum motion to swing your arm forward and back, slightly turning the handle to change direction (Fig 13).
3. For larger directional changes (e.g., vacuuming between chairs), move your legs and body so you remain
4. Avoid twisting your wrist or lifting your shoulder/arm excessively, as this may cause strain or injury.



Fig 13

Using The Self-Cleaning Station

1. Place the Wet and Dry Vacuum onto the base. It will start charging automatically when properly docked (Fig 14).
2. Press the Self-Clean button to begin (Fig 14.1). The station will first prepare the water tank using an electrolysis process.
3. After water preparation, the brush self-cleaning cycle will start automatically. When cleaning is complete, the station will begin hot air drying.
4. The hot air drying is optional and only functions when the unit is on the charging station. To turn it off, press and hold the button located at the back of the station body. (Fig 15).

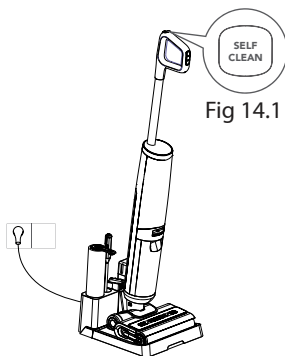


Fig 14.1

Fig 14

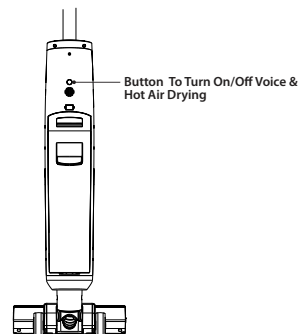


Fig 15

Using The Wet and Dry Vacuum

1. The motorized floor brush can be used on any hard floor. Use on carpet or rug is not recommended.
2. The underside of the motorized brush is equipped with a rubber scraper that helps collect and remove Waste Water during cleaning (Fig 9).
3. To achieve an effective cleaning pattern, move the Wet and Dry Vacuum forward, angle it slightly to the side, and pull it back along the new path to form a consistent ladder-like motion across the floor (Fig 10).
4. The brush motor includes a built-in self-protection feature. If the brush is blocked by a foreign object and cannot rotate freely, power to the motor will automatically shut off to prevent damage.
5. The Wet and Dry Vacuum can operate at both 95° upright and 180° lay-flat angles. It runs even when standing upright, and can lay completely flat for cleaning under low furniture (Fig 11). Ensure the Waste Water level does not exceed the lower MAX line marked for lay-flat use (Fig 12).

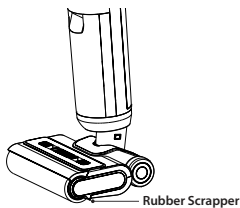


Fig 9

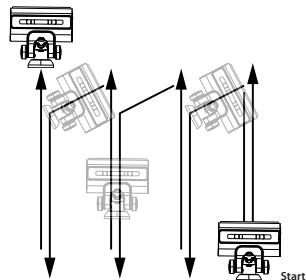


Fig 10

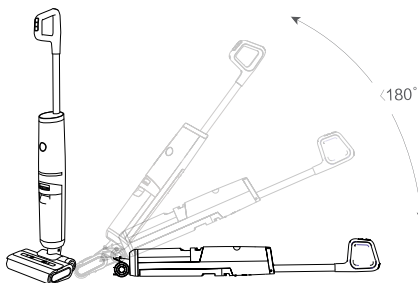


Fig 11

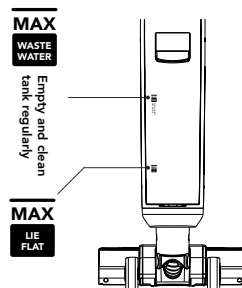


Fig 12

Turn On The Wet and Dry Vacuum

1. Press the ON/OFF button to turn on the Wet and Dry Vacuum. Press again to turn it off, the machine will take a few seconds to shut down as it automatically vacuums up excess water before powering off (Fig 8).
2. Press the Mode button to switch between cleaning modes (Fig 8.1):
 - Dry mode
 - Eco mode
 - Sterilisation modeThe selected mode icon will appear on the display.
3. Press the Max button to activate maximum suction power for deeper cleaning. Press again to return to standard suction (Fig 8.2).

