

Thank you for
purchasing a Corvan product.

Please visit www.corvan.com.my/warranty or scan the QR code to register your product's warranty and www.corvan.com.my/support for video user guide and technical support.



corvan.com.my/warranty



corvan.com.my/support

Corvan®


Corvan Service Centre
T01 & T02, 3rd Floor, Atria Shopping Gallery,
Jalan SS22/23, Damansara Jaya, 47400
Petaling Jaya, Selangor, Malaysia.
Tel: 603-7728 8166
Email: crm@corvan.com.my
www.corvan.com.my

Corvan is a registered trademark of Corvan Asia Sdn Bhd.
COPYRIGHT 2024. ALL RIGHTS RESERVED

Corvan®

CORDLESS VACUUM CLEANER

X8

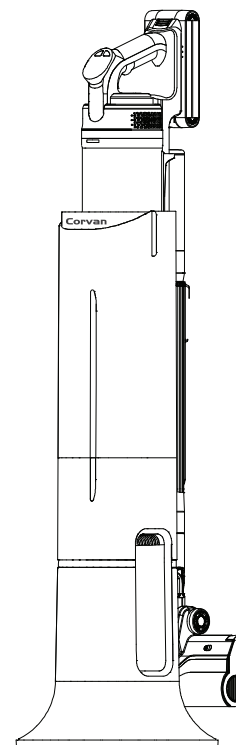

USER MANUAL

Please read this manual carefully before using this product.
We hope you enjoy using this product as much as we enjoyed
developing it and using it daily.


EN

TABLE OF CONTENTS	2
IMPORTANT SAFETY INSTRUCTIONS	3
PRODUCT PARTS	4-7
PREPARING TO USE	8-9
USING	10-13
CLEANING AND MAINTENANCE	14-19
TECHNICAL SPECIFICATIONS	20
TROUBLESHOOTING	21
WARRANTY POLICY	22-23

Before using the Corvan cordless vacuum cleaner, please read this user manual carefully.

1. Read all instructions before using the vacuum.
2. For indoor, domestic use only in suitable environments. Follow operational guidelines in the manual for safe use.
3. This vacuum is not for individuals with limited physical, sensory, or mental abilities unless supervised.
4. If the vacuum, power plug, motorized tool, or self-cleaning station is faulty or damaged, return it to an authorized service center to avoid injury.
5. Children under 8 years old should not use this vacuum.
6. Children 8 years old and older should use it only under supervision.
7. The vacuum is not a toy. Use with care around children, pets, or plants.
8. Do not attempt repairs to avoid injury or electric shock.
9. Connect the power plug to the socket first, then to the self-cleaning station or vacuum cleaner.
10. Keep hair, clothing, and body parts away from the brush and suction inlet.
11. Do not vacuum hot ash, cigarette butts, or flammable liquids.
12. For your safety, use caution on stairs to avoid slips or falls.
13. Ensure the filter is properly installed and kept clean before use.
14. Unplug or remove the vacuum from the station if left unattended for longer than 7 days.
15. Do not immerse the vacuum or station in liquid to avoid electric shock.
16. Use only genuine Corvan parts and accessories.
17. Charge using the correct voltage as per the product manual.
18. Regularly empty the dirt bin and maintain the vacuum for optimal performance.
19. Do not charge the vacuum outside the recommended ambient temperature range (10°C to 35°C) to prevent battery damage and fire risk.
20. Avoid blocking the air outlet or motorized brush to prevent overheating.
21. Store the vacuum at cool and dry place (room temperature 18°C to 28°C) when not in use.


Main Body

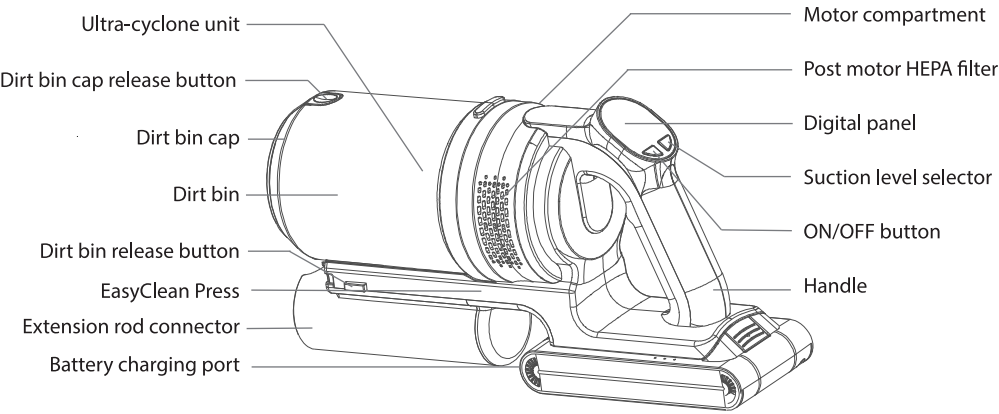


Status Indicator Icons on Digital Panel

	ECO Mode – Vacuum is in Eco mode for energy-efficient cleaning.		Sensor Alert – Dirt blockage at the motorized floor brush inlet.
	AUTO Mode – Suction is auto-adjusting based on dust levels.		Sensor Error – Dust sensor error; please contact customer service.
	TURBO Mode – Vacuum with highest suction.		Floor brush Alert – Floor brush is blocked by a foreign object.
	Vacuum + Mop Mode – Cold water mopping with vacuuming.		Post-motor HEPA Filter Alert – Filter requires cleaning or replacement
	Steam Mop Mode – Steam mopping without vacuuming.		Battery Low – Battery level is low. Charge immediately.
	Vacuum + Steam Mop Mode – Steam mopping with vacuuming.		Battery Full – Battery is fully charged.
	Empty water tank alert – To refill with water to continue mopping.		


Cordless Vacuum

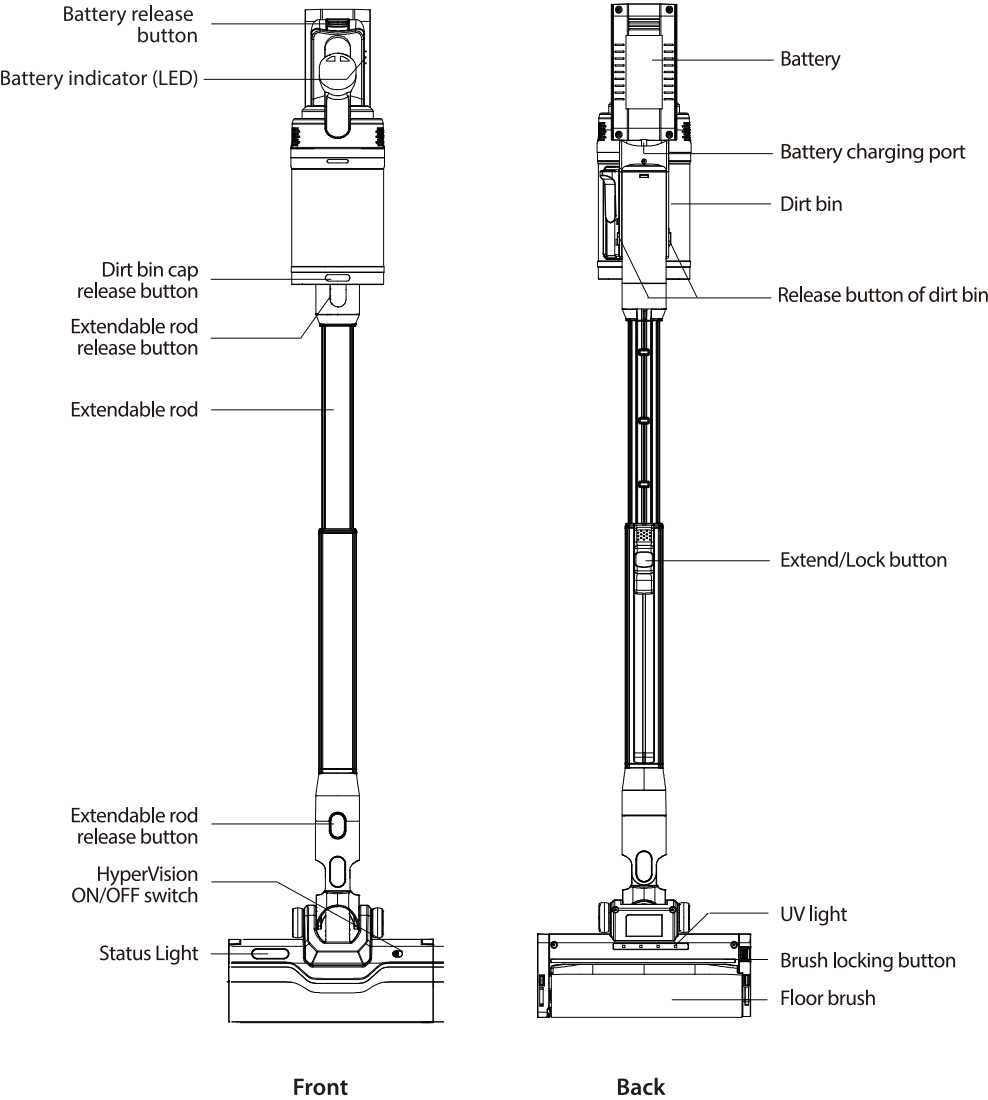


Self-cleaning Station

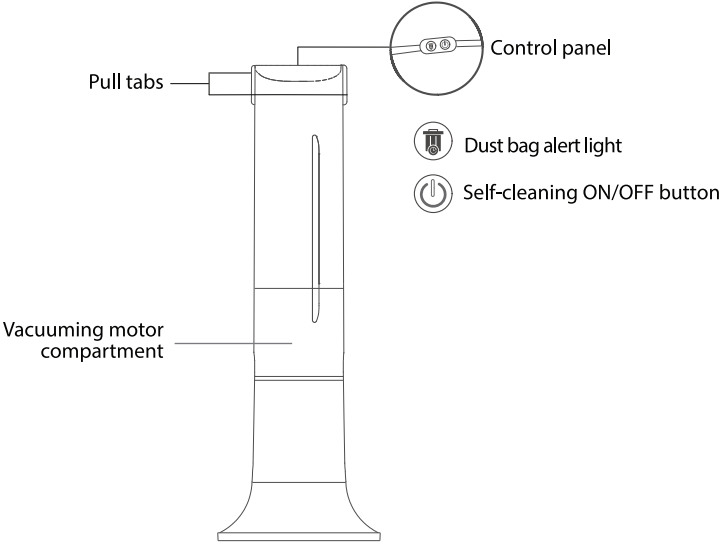

Motorised steam mop

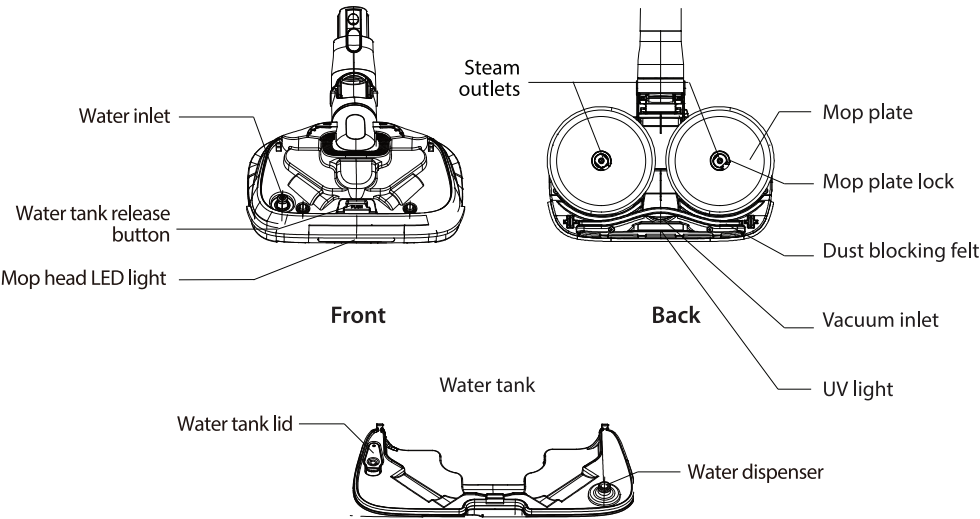

Attachment and Accessories

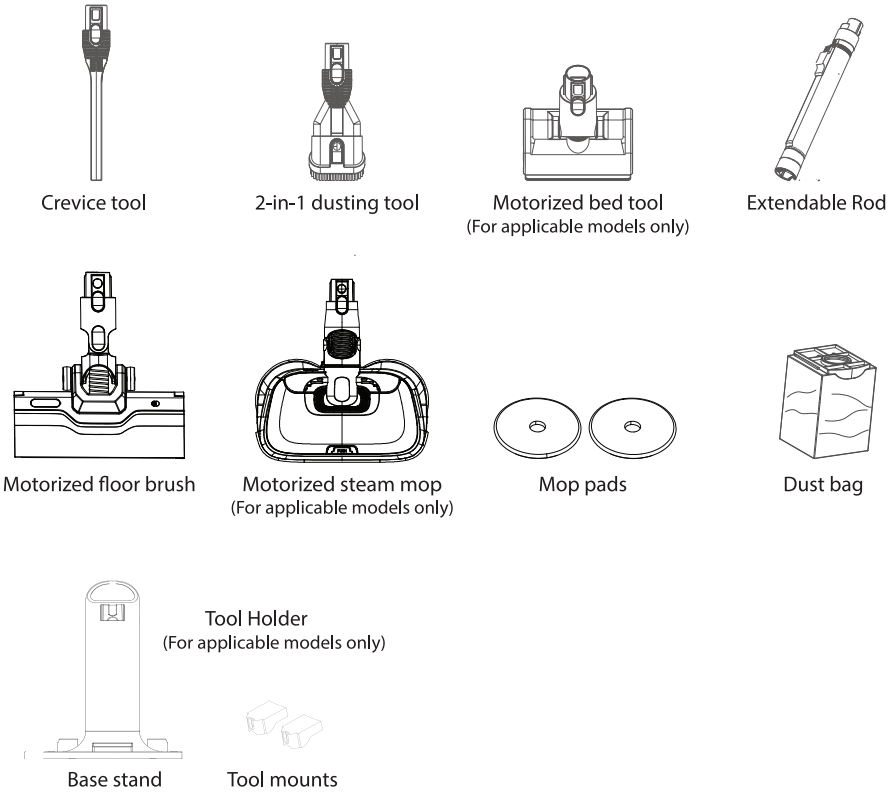


What's in the package

Main body	x 1	Crevice tool	x 1	Self cleaning station	x 1
Motorized floor brush	x 1	2-in-1 dusting tool	x 1	Dust bag	x 1
Motorized Steam Mop (For applicable models)	x 1	Extendable rod	x 1	Tool holder (For applicable models)	x 1
Motorized bed tool	x 1	Microfiber mop pads (For applicable models)	x 2		

NOTE: Attachments and accessories contained in the package may vary due to continuous improvement or according to different model number.

Main body and accessories/cleaning tools assembly

Align the main body, extension rod and the cleaning tool as shown and insert until they "click". The extendable rod can be adjusted in length from 42cm to 66cm. To remove any attachments/accessories, press and hold the button, and pull to remove.

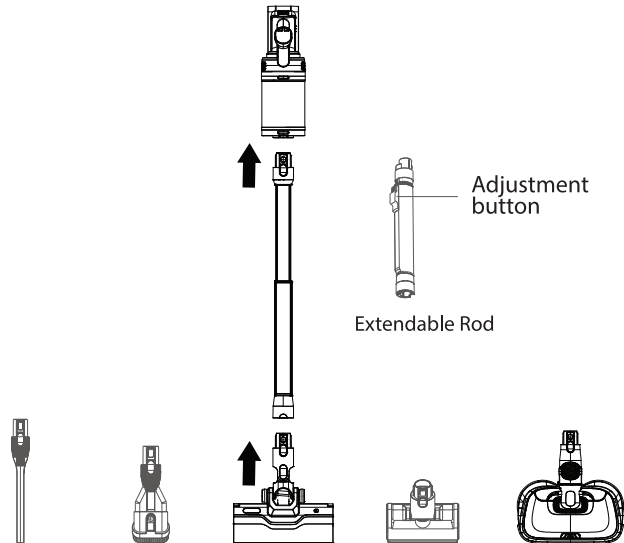

NOTE: All attachment included are compatible with the main body and the extension rod.

Tool holder

1. Insert the tool mounts into the base stand (Fig 1) till they "click".
2. Place the crevice tool and the 2-in-1 tools to the base stand (Fig 2).
3. Attach the connector of the motorized tools (motorized steam mop, motorized floor brush, or motorized bed tool) to the tool mounts (Fig 3).

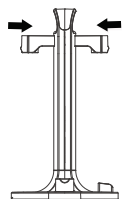


Fig 1

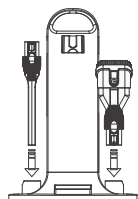


Fig 2

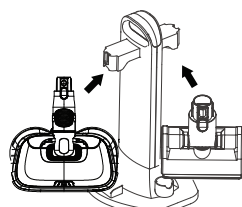


Fig 3

Charging the battery

1. Insert the battery pack into the vacuum, then plug the power cord into a power socket and dock the vacuum into the self-cleaning station (Fig 1).
2. The battery indicator shows a blinking battery icon with the percentage increasing. Once the icon stays constantly lit and reaches 100%, charging is complete. Charging takes approximately 4.5 to 5.5 hours, though environmental conditions can affect the charging time.

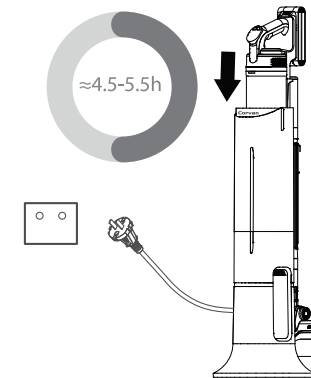


Fig 1

WARNING! Do not lean the vacuum against any surface (wall, table, cabinet, etc.) in an upright position to avoid damage if it slips and falls.

Setting up the motorized steam mop

1. Align the two mop pads with the mop plates and press gently to attach (Fig 1).
2. Next, press the "PUSH" button (Fig 2) to release the water tank.
3. Finally, pull gently to open the water tank cap and fill it with clean water only (Fig 3).
4. Place the water tank in position and push down to install.

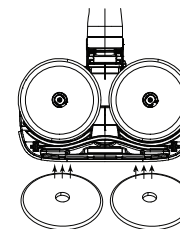


Fig 1

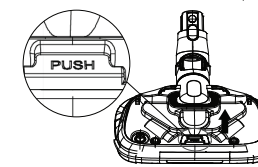


Fig 2

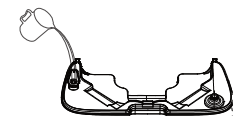


Fig 3

Turn on the vacuum cleaner

1. Press and hold the ON/OFF  button to turn on the vacuum (Fig 1). AUTO mode is the default, with the battery indicator light turning blue.
2. In AUTO mode, the vacuum adjusts suction automatically based on detected particles (works only with the motorized floor brush).
3. To manually choose a suction mode, press the  button to switch between ECO, AUTO, and TURBO (Fig 2).

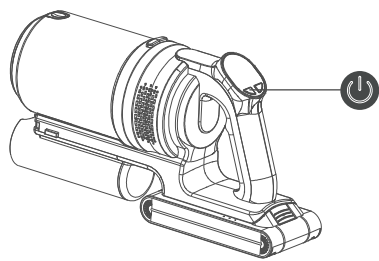


Fig 1

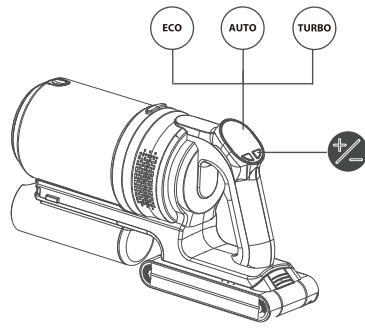


Fig 2

Using the motorised floor brush

1. The motorized floor brush is ideal for hard floors and low-pile carpets.
2. It features a dust-blocking felt strip to prevent debris from being pushed back, plus a UV light for floor sterilization. (Fig 1) Avoid pulling the brush backward over dirt for best results.
3. The vacuum's HyperVision projection light exposes fine dust for easier cleaning. Push the ON/OFF switch to activate HyperVision (Fig. 2).

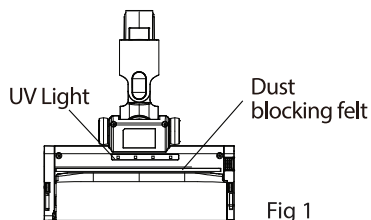


Fig 1

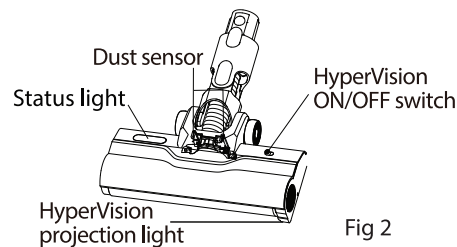


Fig 2

WARNING: Do not look directly at the projection light to avoid eye injury.

4. The status light serves two functions: 1. dust detection and 2. brush resistance monitoring.
In AUTO mode: Green = clean, partial red = some debris, fully red = heavy dust.
In ECO/TURBO mode: Green = normal, partial red = rising resistance, fully red = brush stuck.
5. When cleaning the floors, move the vacuum forward to collect dirt, pull back, then turn and push forward to clean the next track in a ladder pattern (Fig. 3).

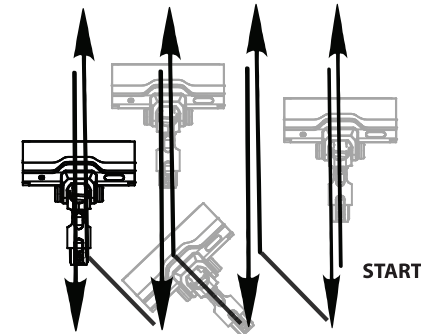


Fig 3

IMPORTANT TIPS:

1. Stand upright, keeping your arm naturally bent and your shoulders relaxed.
2. Use a pendulum motion to swing your arm forward and back, slightly turning the handle to change direction (Fig 4).
3. For larger directional changes (e.g., vacuuming between chairs), move your legs and body so you remain perpendicular to the vacuum.
4. Avoid twisting your wrist or lifting your shoulder/arm excessively, as this may cause strain or injury.

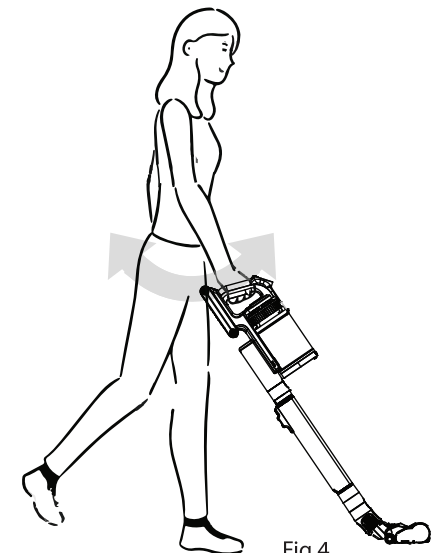


Fig 4

Using the motorised steam mop

1. Attach the Motorized Steam Mop to the vacuum cleaner.
2. Press the ON/OFF button to start in the default vacuum and mop mode with no heating function (cold water, ECO mode).
3. To switch to steam-only mode, press the +/- button. The "steam" icon will appear, and steam will dispense through the 2 steam outlets in 10 to 20 seconds (Fig. 1).
4. Press the +/- button again to activate both vacuum and steam modes. "steam with vacuum" icons will display.
5. Press the +/- button once more to return to the initial vacuum and mop mode with no heating.
6. The vacuum remains in ECO suction mode when using the mop head. The UV light automatically activates during operation and deactivated when the mop unit is lifted off the floor.

WARNING: Do not look directly at the UV light to avoid eye injury.


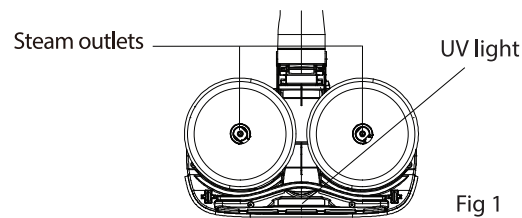


Fig 1


Using the motorised bed tool

1. Attach the Motorized Bed Tool to the vacuum and power it on. Push forward to clean — there's no need to press down.
2. Move the tool over surfaces like mattresses and sofas. The UV light automatically activates when in contact with the surface and turns off when lifted.
3. If needed, switch to a higher suction mode for deeper cleaning. Regular cleaning of the brush is recommended for optimal performance.


WARNING: Do not look directly at the UV light to avoid eye injury.

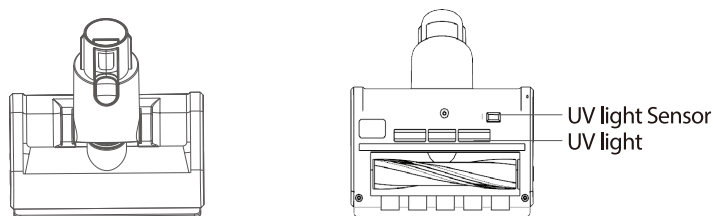

Using other accessories

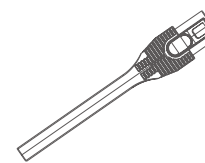

For narrow and deep spaces.

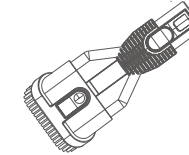

For uneven surfaces like keypads

Using the self cleaning station

1. Ensure the Self-Cleaning Station is securely positioned, then place the vacuum into the station as shown in Fig 1.
2. Connect to power and press the ON/OFF button. The station will run three 10-second cycles, then shut down and close the dirt bin lid (Fig 2).
3. Press and hold the ON/OFF button for 3 seconds to activate auto mode. The dust bag alert and ON/OFF indicators will blink. The station will start vacuuming when the cordless vacuum is placed. After the cycles, the lid will be closed to finish the task.
4. Press and hold the ON/OFF button for 3 seconds to toggle between manual and auto modes.

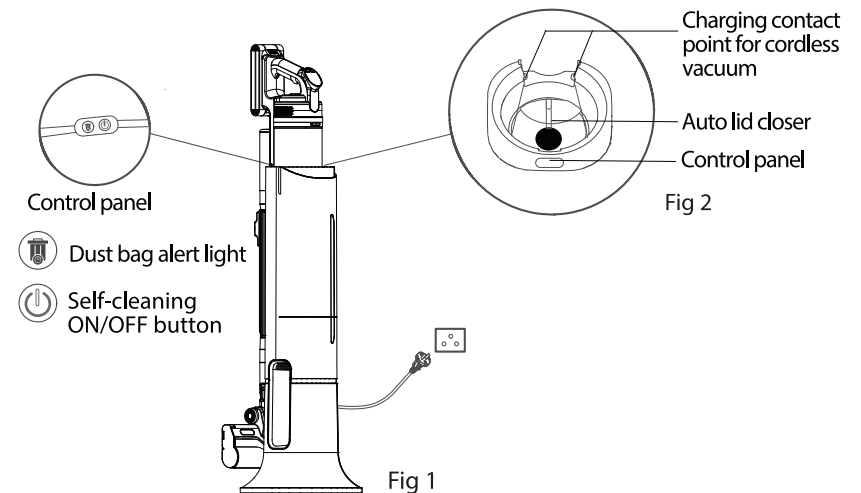


Fig 1

Fig 2

For optimal performance, keep filters clean. Replace the pre-motor and HEPA filters annually, or if airflow remains weak after cleaning and drying.

Clearing the dirt bin

Insert the end of the dirt bin into a plastic bag and secure it with a rubber band. Press the dust bin cap release button to pull open the lid, emptying the contents into the bag (Fig 1).

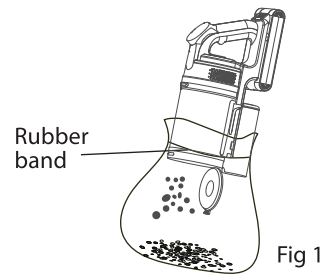


Fig 1

Cleaning the dirt bin assembly

1. Press the release buttons on both sides of the dirt bin. Lift to remove the dirt bin (Fig. 1).
2. Remove the cyclone unit and synthetic pre-motor filter from the dirt bin (Fig. 2).

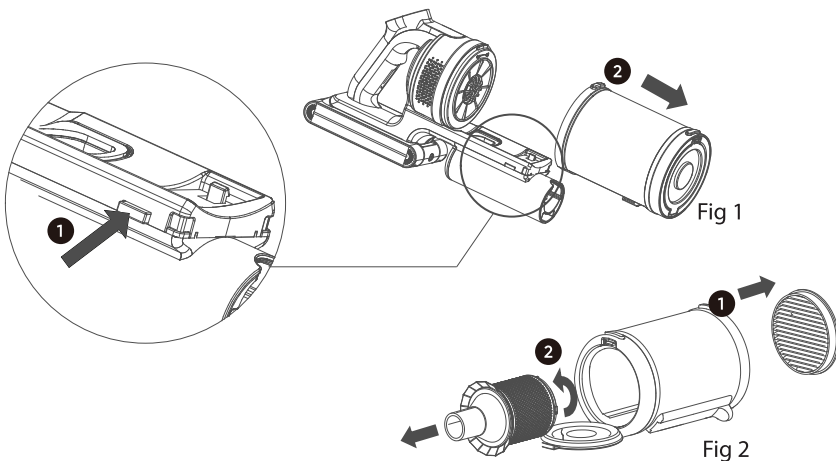


Fig 1

Fig 2

3. Clean the metal pre-filter using a soft-bristle brush (e.g. the 2-in-1 dusting tool). Tap to remove dust from the pre-motor filter or wash them with water. Ensure they are fully dry before reassembling (Fig. 3). **DO NOT wash the dirt bin.**

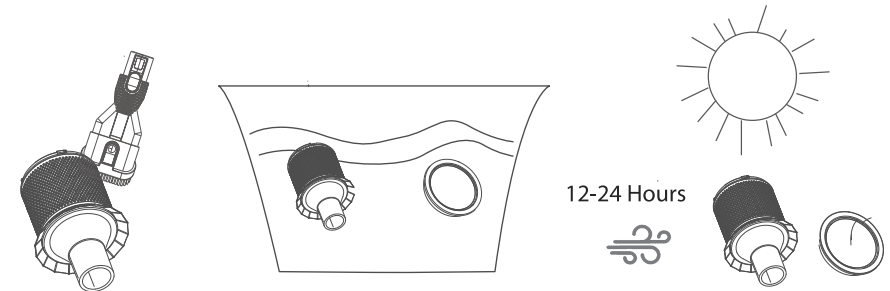


Fig 3

Cleaning the post-motor HEPA filter

Turn the HEPA filter cover counterclockwise to remove it (Fig 1). Gently tap to clean, or dip in water if needed (Fig 3). Ensure the HEPA filter is completely dry before reassembling and using.

For optimal performance, it is recommended to replace the filter yearly.


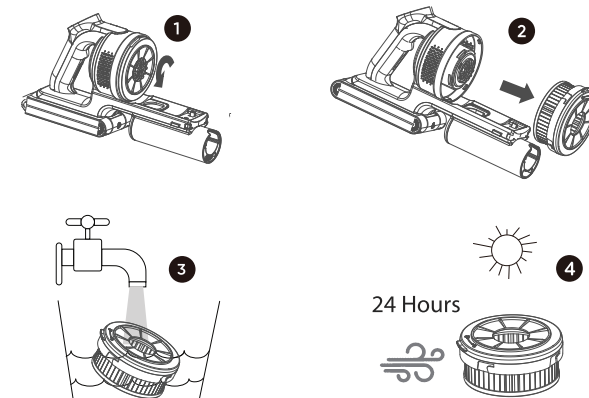


Fig 1


Cleaning the floor brush

1. Press the button and pull to release the roller brush.
2. Gently pull the brush out from the brush holder.
3. Remove the brush bearing cap by gently pulling it.
4. Clear away any debris or hair from the bearing.
5. Occasionally apply lubricating oil to the metal bearing.

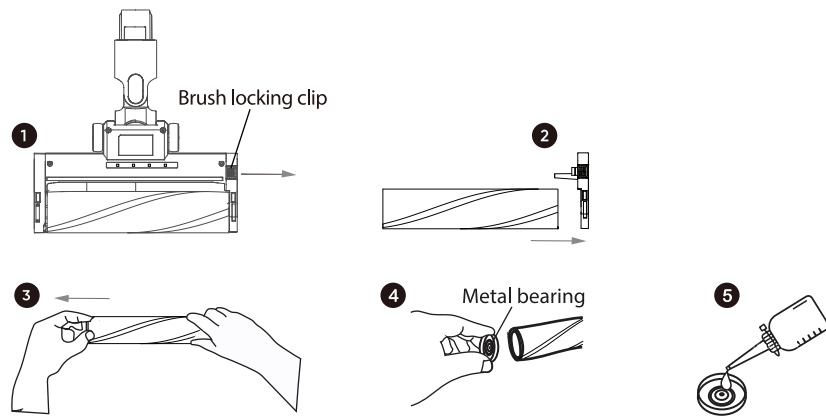



Washing the floor brush (if necessary)

If needed (e.g., after contact with sugary liquid), rinse the brush under running water. Remove the bearing cap before washing to prevent rust, and **avoid soaking the brush**.

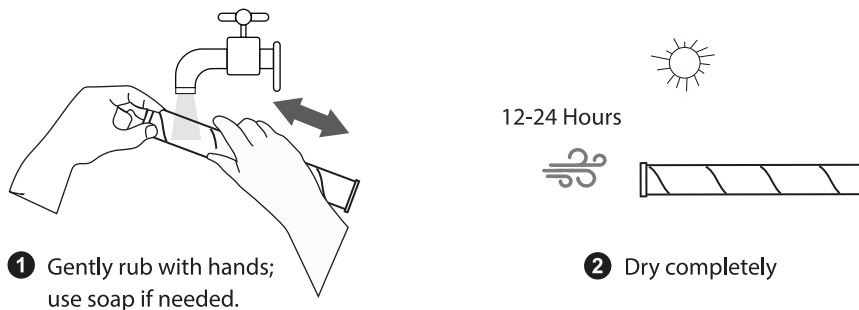


Cleaning the mop pads

It is recommended to clean the mop pads after every use. Replace when necessary.

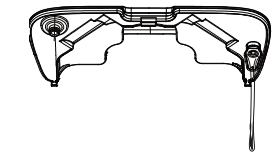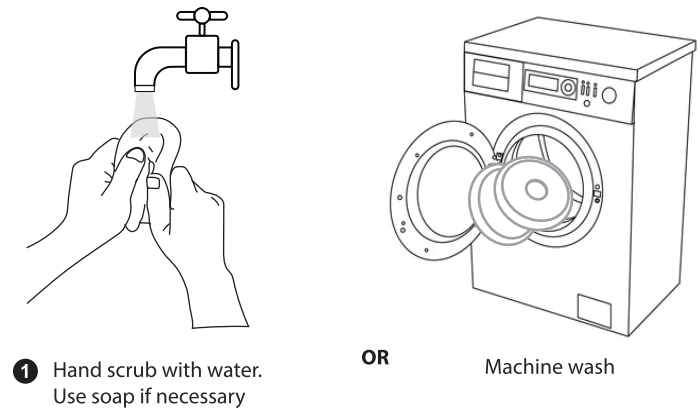


Self-cleaning station upkeep


1. Replace the dust bag whenever the dust bag alert light turns on.

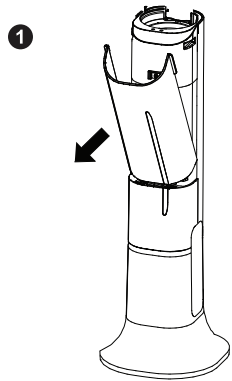


Hold the tabs to remove the cover.

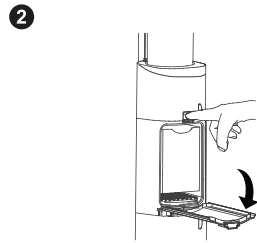

Press the button to open the lid.

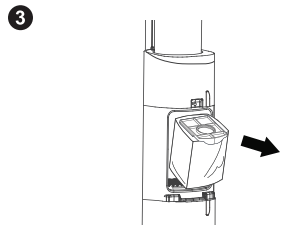


Hold the dust bag handle to pull it out and dispose of it properly. Slide in a new dust bag.

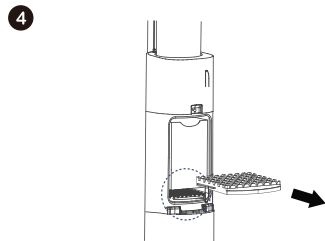


1. Pull to remove the station filter.
2. Tap to clean. Wash only when needed, and air dry fully.

Clean the cordless vacuum filter : self cleaning option


This self-cleaning procedure is suitable for general cleaning only. For thorough cleaning and replacement, please refer to the filter cleaning section (page 14, 15).

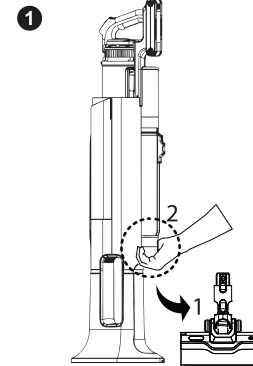

1. Remove the brush head.
2. Block the airflow.

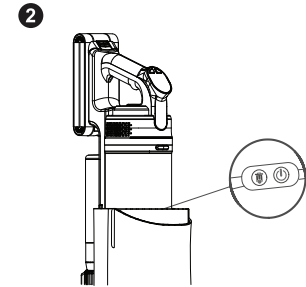

Press the ON/OFF button to run the self-cleaning cycle as usual. The reverse airflow will help remove dust from the filter.

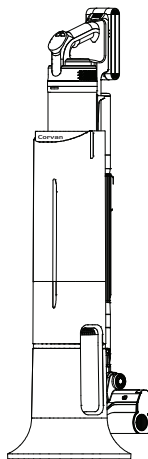

Cordless vacuum

Input	:	30VDC
Rated power	:	500W
Battery	:	Li-ion 25.9V 3000mAh
Charging time	:	4.5-5.5hr
Run time	:	60min(Eco), 15-20min(Turbo)
Product dimension	:	250(W) x 180(D) x 1220(H)mm
Net Weight	:	1.6 kg (main body) 2.5kg (with extension rod and motorised floor brush)

Self cleaning station

Power input	:	220 - 240VAC 50-60Hz
Rated power	:	650W
Product dimension	:	260(W) x 250(D) x 740(H) mm
Net Weight	:	3.2kg
Dust bag capacity	:	1.5L

NOTE:

Charging time and run time vary depending on ambient temperature and operating conditions. The protection system will be deployed automatically to protect the motor and battery if the temperature is too high or too low.

	Symptoms	Possible Causes	Suggested Solutions
1	Cannot turn on.	- Low battery power. - Over temperature protection triggered.	- Charge the vacuum cleaner to use. The battery icon blinks to indicate charging. - Allow the vacuum to cool down and turn on again.
2	Battery is not charging.	Over temperature protection triggered. Battery LEDs are flashing red.	Let the machine cool down in a cool location for 15-30 minutes. This is normal when running at high suction mode continuously for a long period.
3	Fully charged but run for a few seconds only.	Wrong power adaptor is used.	Check that you are using the correct adaptor with output 31VDC 0.5A.
4	- Weak suction. - Machine stop working with floor brush or filter alert lit up.	- Filter is clogged by fine dust. - Motorised brush is not spinning. - Air passage is clogged by foreign object.	- Clean filter regularly. Refer to Maintenance section. - Remove hair and foreign object from the brush. Remove compressed hair strains from the bearing. Refer to Maintenance section. - Check and remove any foreign object at the floor brush, extension rod, main body air inlet and dirt bin.
5	Motor sounds abnormal when running.	Vacuum inlet or filter is clogged.	Clear blockage along brush inlet, extension rod and dirt bin, and clean filter.
6	Main brush not spinning.	Brush is stuck.	- Remove any foreign object that caused the brush to cut off power automatically. - If there is no foreign object (it may have dropped off), restart the vacuum.
7	Self-cleaning station is not working.	- No power. - Dust bag is full. - Vacuum cleaner not in place.	- Check power socket and switch on. - Replace dust bag. - Place vacuum cleaner properly to ensure good contact.

NOTE:

- Do not return the vacuum to the retailer as they do not provide after sales service.
- If symptom persists, please contact service centre at 603-77288166 or email crm@corvan.com.my for further assistance.

Corvan Asia Sdn Bhd (Corvan) warrants to the original purchaser (“you” or “your”) that your Corvan Cordless Vacuum Cleaner product hardware and the brushless(digital) motor of the vacuuming turbine (jointly named “Product”) shall be free from defects in material and workmanship for 1 year and 5 years respectively from the date of original purchase.

Remedies

To the maximum extent permitted by applicable law, Corvan’s entire liability and your exclusive remedy for any breach of warranty during the applicable warranty period shall be, at Corvan’s option, to repair or replace the Product, provided that the Product is returned to the point of purchase or such other place as Corvan may direct with a copy of the sales receipt or dated itemized receipt. Shipping, handling charges and bank credit card commission may apply. Corvan may, at its option, use new or refurbished or used parts in good working condition to repair or replace any Products. Any replacement Product will be warranted for the remainder of the original warranty period.

How to Obtain Warranty Support

Before submitting a warranty claim, we recommend you to contact Corvan’s technical support at 603-77288166 or email crm@corvan.com.my for technical assistance.

Exclusions

This warranty does not cover power adapter (charger) and consumables including filters and brushes. Problems or damages resulting from (1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly of the Product; (2) improper operation or maintenance, usage not in accordance with Products instructions or connection to improper voltage supply; (3) negligent use or care, neglect or careless operation of the Product; (4) use of consumables, parts and accessories including batteries other than those produced or recommended by Corvan are not covered under this warranty. In addition, to the maximum extent permitted by applicable law, this warranty does not cover Product (1) used and claimed outside the country of purchase; (2) not purchased from an authorized dealer of Corvan; (3) repaired or altered by parties other than Corvan, or its authorized agents; (4) whose serial numbers have been altered or removed; or (5) damaged from external sources such as transit, weather, electrical outages or POWER SURGE.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE WARRANTIES SET OUT ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES OR TERMS AND CONDITIONS, AND WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OR TERMS AND CONDITIONS OF MERCHANTABILITY, SATISFACTORY QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR NON-INFRINGEMENT ARE EXPRESSLY DISCLAIMED BY CORVAN AND ITS SUPPLIERS. NO OTHER WARRANTIES OR GUARANTEES, WHETHER EXPRESS OR IMPLIED, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON CORVAN.

Limitation of Liability

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CORVAN SHALL NOT BE LIABLE FOR LOSS, WHETHER DIRECT OR INDIRECT, OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS OR OTHER FINANCIAL LOSS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF CORVAN HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, CORVAN’S ENTIRE LIABILITY SHALL BE LIMITED, AT CORVAN’S OPTION, TO REPLACEMENT OR REPAIR OF THE PRODUCT OR REFUND OF THE PURCHASE PRICE PAID. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND IS NONTRANSFERABLE.

No Other Warranties

No Corvan dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Governing Law

This Limited Warranty shall be governed by the laws of Malaysia.

November 30, 2024

Corvan®

Corvan Service Centre
T01 & T02, 3rd Floor, Atria Shopping Gallery,
Jalan SS22/23, Damansara Jaya, 47400
Petaling Jaya, Selangor, Malaysia.
Tel: 603-7728 8166
Email: crm@corvan.com.my
www.corvan.com.my

Corvan is a registered trademark of Corvan Asia Sdn Bhd (1114403-X).

All rights reserved 2024